

Installation Guide

For RNS510



- High quality
- Higher reliability, stability
- Simple assembly
- Custom design service

1. Disassembling Head Unit



Disassemble Head Unit like picture.



Connect FPC cable to the indicated connector from System Board of HU.

2. Connecting FPC cable



Connect the other side of FPC cable to the connector from LCD.



Connect FPC cable to sub-board.

3. Connecting Sub-board



Connect LCD cable from Interface to sub-board.



Complement