



Installation Guide

-New Cayenne 09 year
(PCM 3.0)


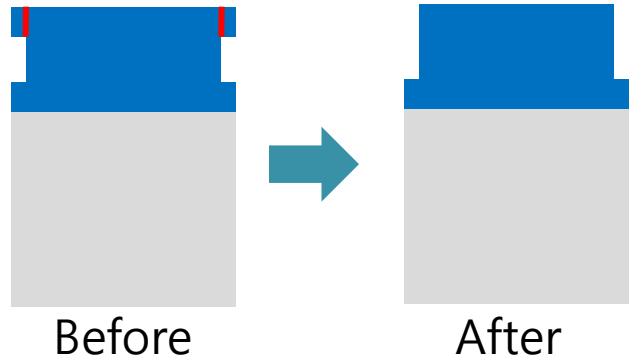


1. Original FFC cable cutting

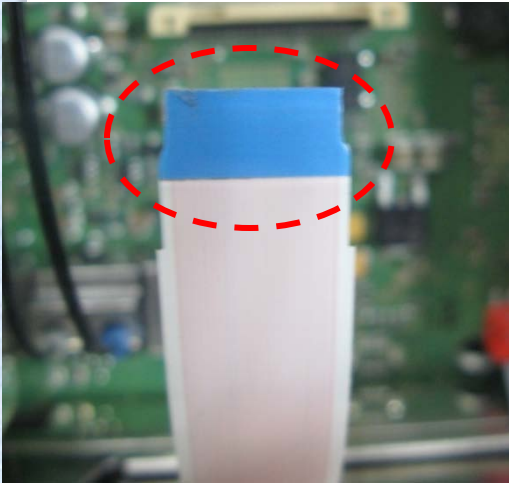


Please carefully cut the original FFC cable which is connected between board and panel in head unit. This work is for connecting with offered "button cable", and should be done carefully for pins not to be damaged.

2. Connect FFC cable with offered button Cable

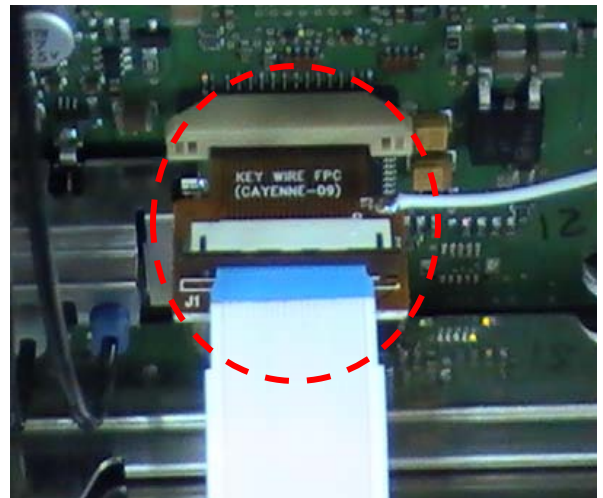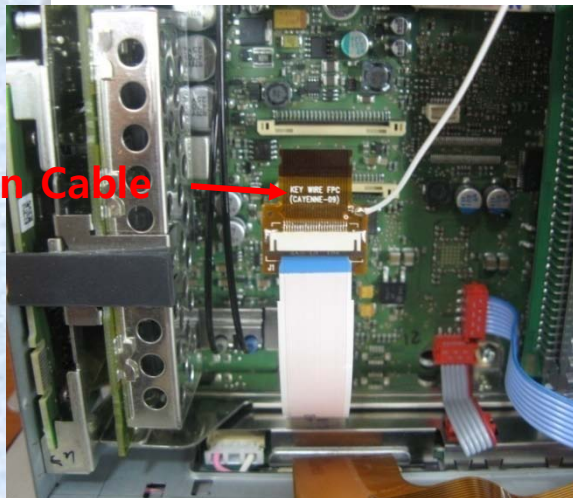


After connecting the cut FFC cable with the offered "button cable" like the right picture, connect the button cable to the indicated white connector on the board.

3. Connecting button cable with sub-board

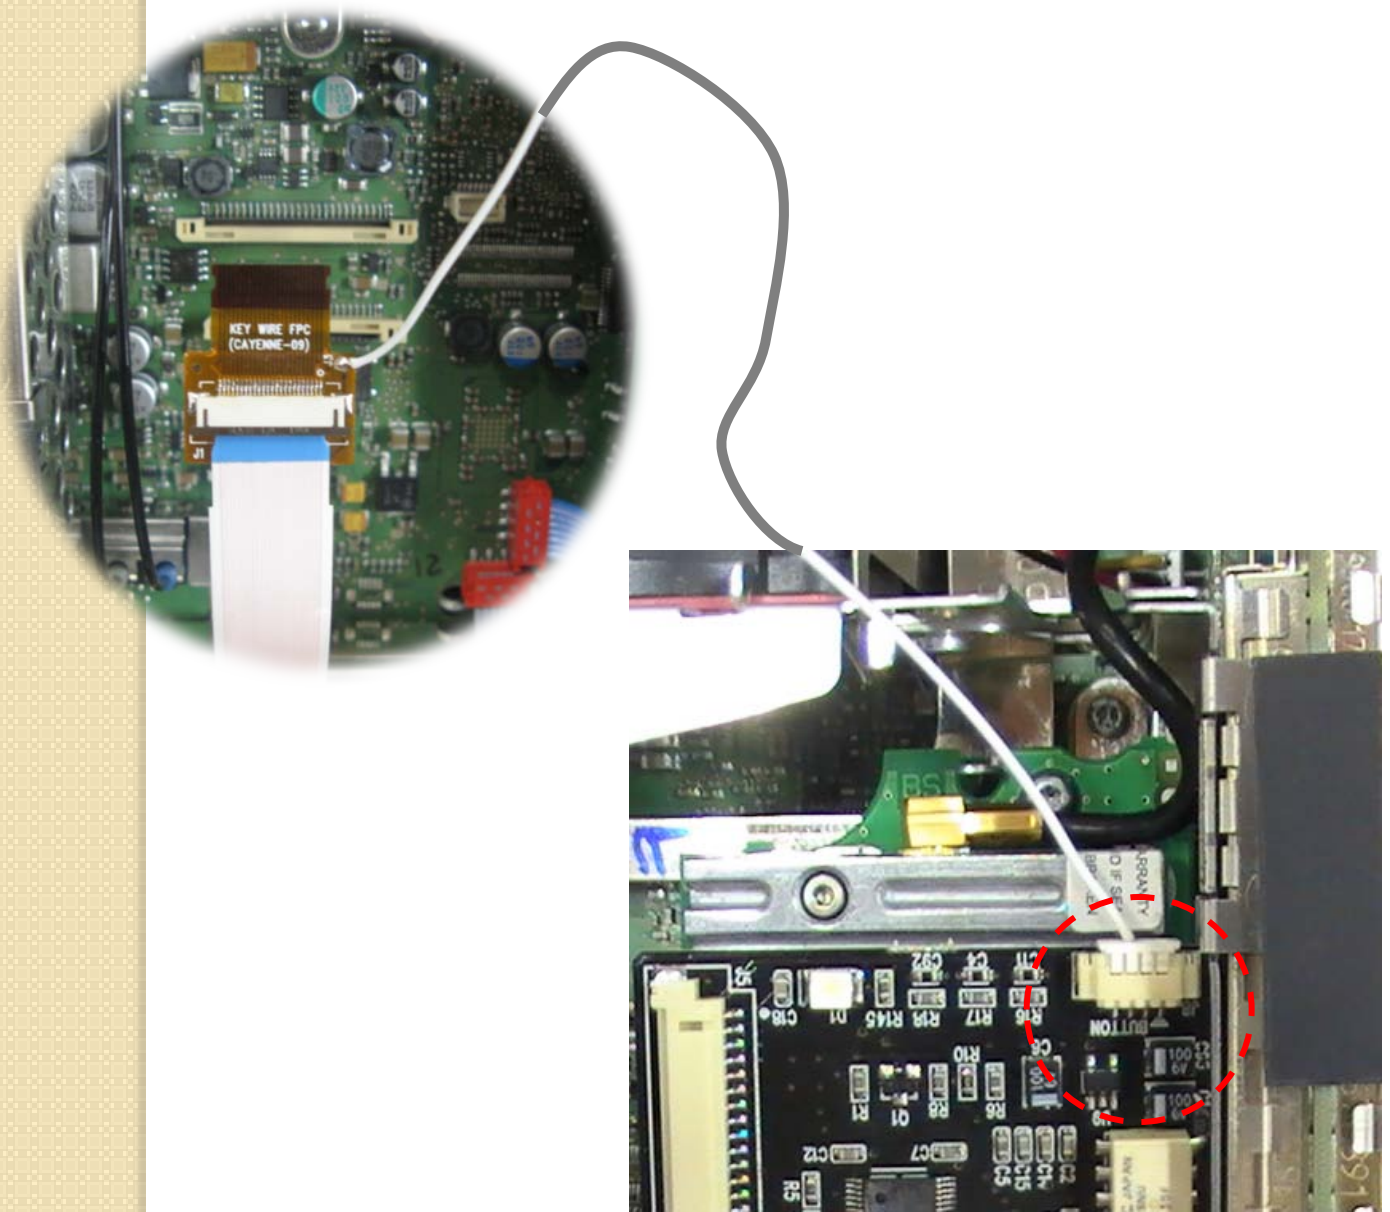



Connect a wire soldered on the button cable to the sub-board like above pictures.

4. Eliminate the original FFC cable

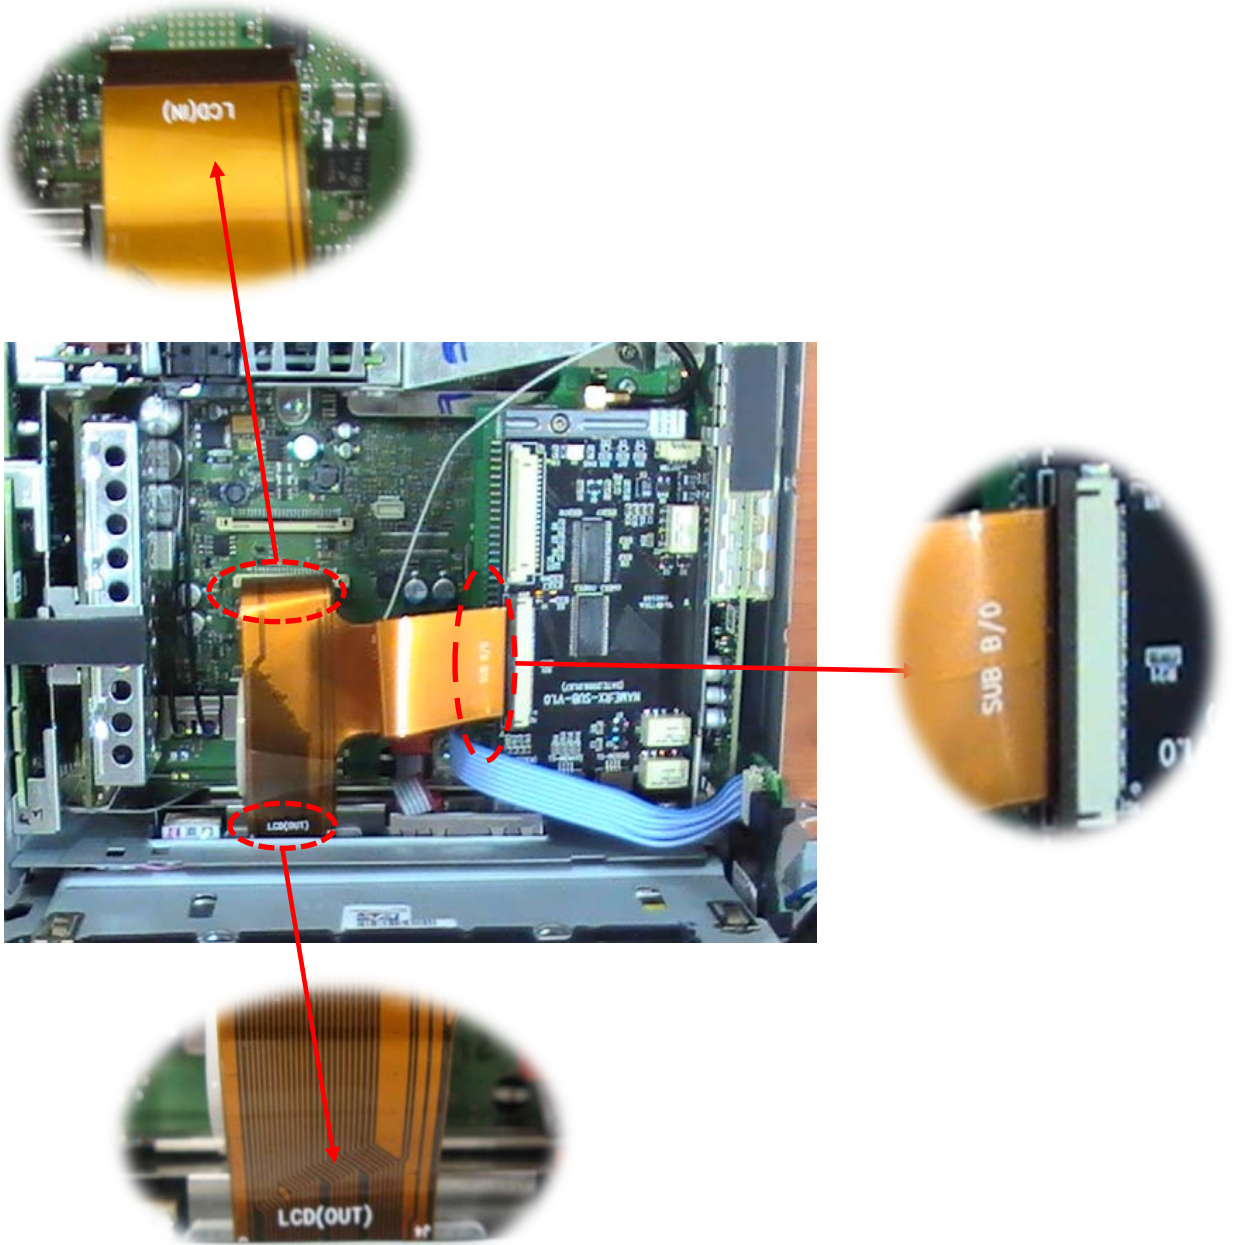

After removing the original FFC cable, connect the offered the yellow FFC cable looked like "T" into sub-board like the pictures. **Be careful in order not contacted side wrong.** (This could occur serious problem to head unit.)

5. Connection between Cayenne Board and Sub-Board

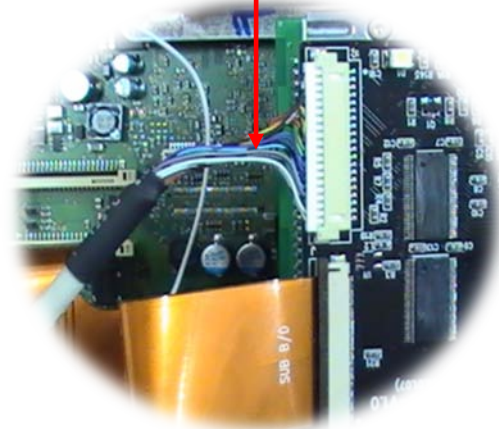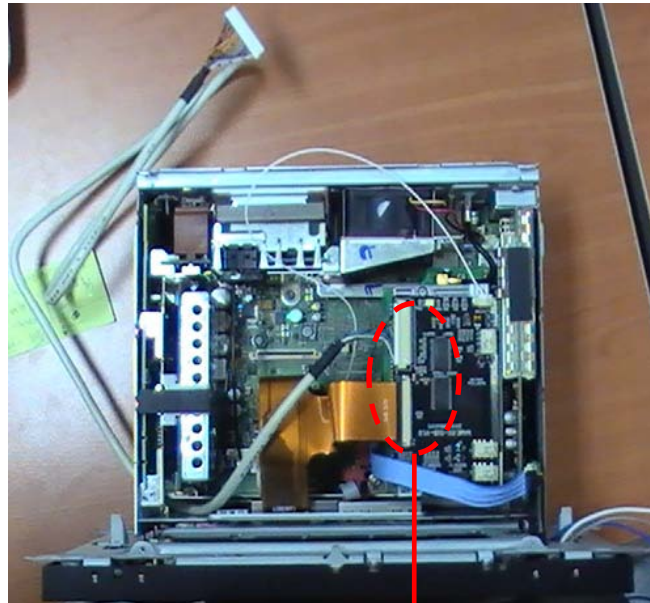

Connect sub-board into interface board with putting LCD cable into head unit.